

 
Set up the right heating and cooling solution for your home

We offer underfloor, in ceiling installation or combination of options to suit every home.

OPTION ONE - Full Home Solution



In Ceiling system layout

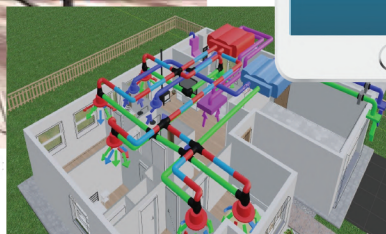


KEY FEATURES

- Heating and cooling to all rooms through concealed ceiling vents or floor grilles
- Split system options for temperature control in the home
 - Full home centrally ducted to all rooms
 - Ducted unity solely for bedrooms or choose a high wall, ceiling cassette or floor console unit for the lounge/dining areas
- Get warm and cool air into all areas of the home that you would not be able to achieve with highwall heat pumps alone
- System comes with a range of modes – Heating, cooling, drying, fan mode (this runs the indoor unit only for an additional boost of air) or use Auto Mode as this lets the system adjust to the most energy efficient way of running
- Achieve the ultimate temperature with full variable zone control
- Use the scheduling tool to control rooms based on time, temperature or humidity
- System can be installed underfloor or in the ceiling space
- Use the scheduling tool to control rooms based on time, temperature or humidity




OPTION TWO - Split Home Solution

Put your living room heat pump in the ceiling, on the floor or on the wall

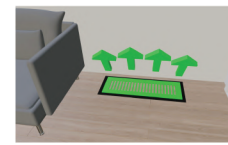

Underfloor system layout

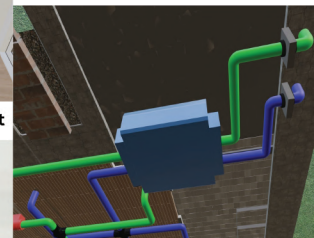

Enjoy full home zone control



Wireless temperature sensor control throughout. Your home, your way.

North Island Ph. 09 377 8793 | South Island Ph. 03 214 7793

 
www.solarx360.co.nz



The smart control system allows you to save energy by controlling any room/zone that gets too hot or cold in order to maintain a steady temperature. Just set and forget.

Features include:

- Every install comes with a smart control tablet and access to digital apps for both android and apple devices.
- Choose up to six zones/rooms to control
- Split all areas, including open plan spaces, into separate zones
- Combine two rooms into one zone
- Comes with the new auto mode feature. Just set your desired temperature for each zone and let the system do all the work
- Choose the percentage of air flow for each zone and control the flow rate between 1 - 100%
- Each zone has a wireless temperature sensor installed on the wall
- Each wireless temperature sensor comes with a button that allows you to control the zone manually.
- The wireless temperature sensors give you live readings every four minutes
- Schedule and set zones to open and close based on time and/or temperature
- Operate your smart control system from anywhere in the world

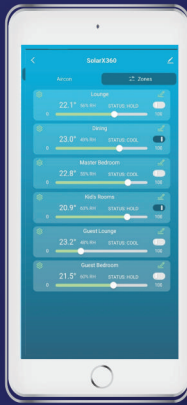

ZONE CONTROL

Choose the amount of heating and cooling you'd like in each room/zone.

SMART WIRELESS SENSOR CONTROL

Schedule zones to a desired temperature and control the flow rate

